



## Platter Installation

To minimize the vertical wobble of the aluminum die-cast platter, please install the platter following the steps below.

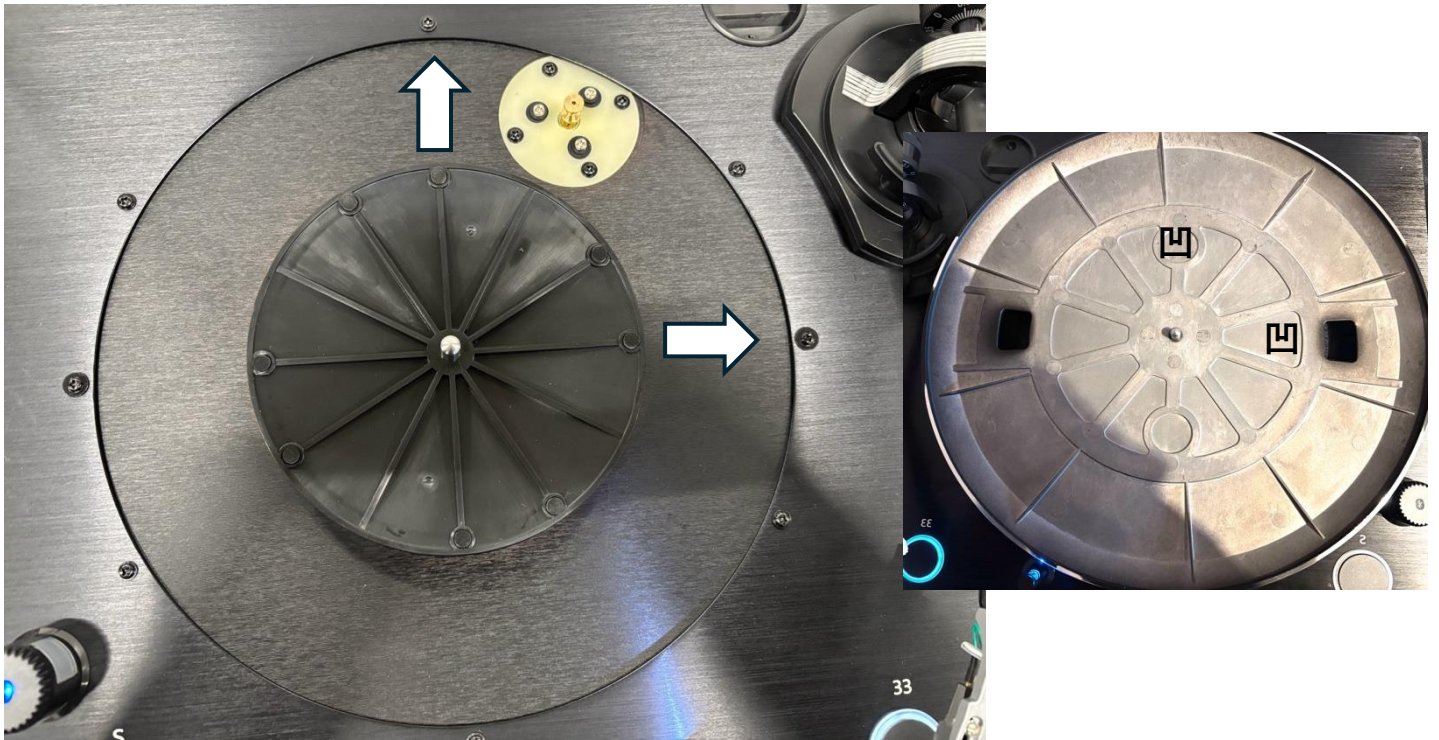

1. Manually rotate the rubber stoppers on the inner platter to the positions shown in the photo above. (The stoppers are naturally black but are colored white in the photo for clarity.) Align the stoppers to the 12, 2, 3, 5, 6, 8, 9, and 11 o'clock positions. Use the outer screws located on the 12 and 3 o'clock axes as alignment guides. This step ensures the rubber stoppers fit into the recesses on the underside of the aluminum die-cast platter.

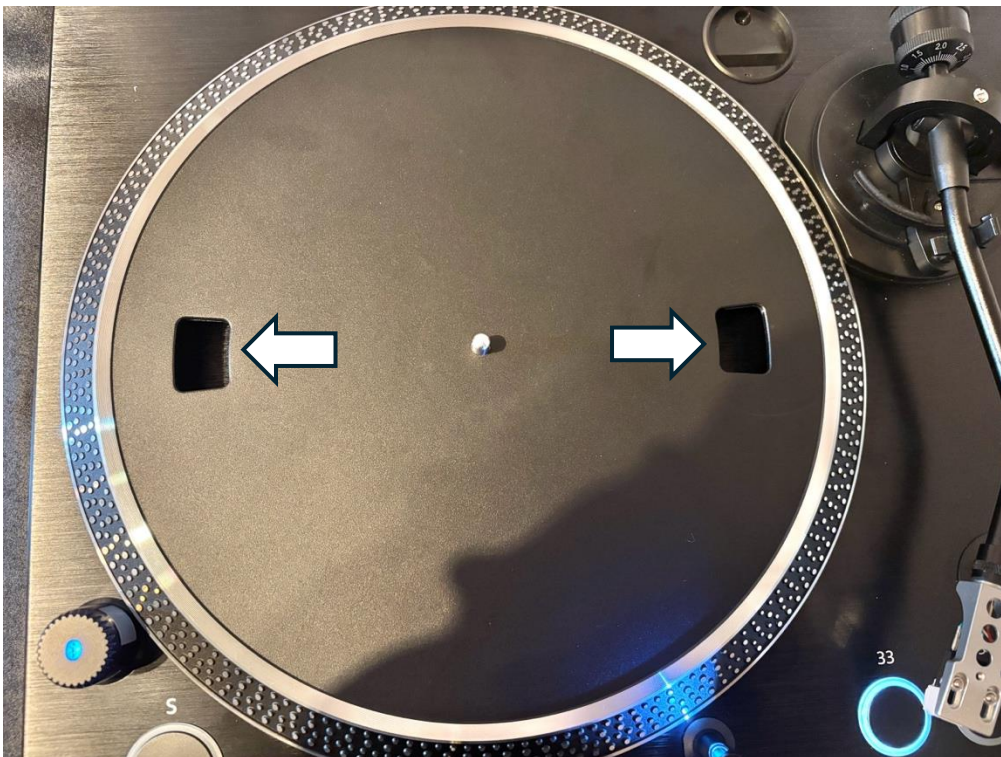

2. Gently place the aluminum die-cast platter so its holes are at the 9 and 3 o'clock positions, being careful not to move the inner platter. If it wobbles, rotate the aluminum platter 180 degrees. Installation is complete if there is no extreme wobbling (a slight amount is normal).